




# RV WI-FI lite Quick start User Guide


## 1 Setting up the SIM card

**a** Activate and add data to your SIM card as per instructions on the sim card packet.

Note: RV WIFI lite does not operate on the Telstra Wholesale network. These include but not limited to: Aldi, Boost, Belong, Lyca, Woolworths, Nu & Tangarrine.

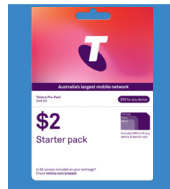

**b** Break your SIM card down to the Nano size.

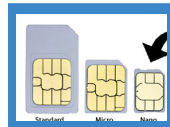

**c** Remove the middle adapter from the adapter pack and place the activated Nano Sim in the recess of the adapter.



**d** Place the sim/adapter into the sim card slot, making sure the sim stays in the recess of the adapter.



## 2 Setting up the Antenna's

Stick Antenna's **OR**

3 in 1 Antenna (optional)

Attach all four antenna's to the antenna ports.

Install the 3 in 1 antenna on the roof.

**a** 2.4 stick antenna's to top and bottom left hand side.

**a** 2.4 stick antenna to top left antenna port.

**b** 4.0/LTE stick antenna's to top and bottom right hand side.

**b** From 3 in 1 antenna, WIFI to bottom left port, 3G to Bottom right port, 4G to top right port.



## 3 Setting up the Power Cord

Plug the 12volt power socket into a single power socket.



## 4 Connecting to the WIFI

- Power on the router and wait 5 minutes.
- On your device (phone/laptop etc.), go to : SETTINGS.
- Go to: WIFI.
- Wait for RV WIFI to come up as a WIFI option.
- Click on: RV WIFI
- You will be asked for a WIFI Password or Security Key. Type in: rvwifi1234 (all lower case and no spaces).
- Click on: connect.
- Wait for confirmation of connection.
- Scan the QR code on the front of the router for full instructions and to change your WIFI password.