

User Guide 2024v1

This purchase will give you greater freedom to link your Starlink Satelite System and enjoy your travelling without sacrificing the lifestyle that the internet provides.

What makes up your RV WI-FI DishyDock Power

The RV WIFI DishyDock Power is the heart of the Starlink Integration System.

It converts your Starlink System to 12 volts, providing connectivity to the RV WIFI router and its extended WiFi range.

It converts 240v to 12v resulting better power usage and caravan battery life.

RV WIFI DishyDock Power

12V Power Cord (attached)





Starlink Adapter (Yeosheng)

0.3m AWG23 Ethernet Cable



Other kits available in the DishyDock system

DishyDock Ports (enclosed setup)

Connects your Starlink Dishy to your caravan or RV with ease.

Includes: 2 x DishyDock Ports

1 x 3,5,10 or 15m AWG23 Shielded Ethernet Cable

DishyDock Ports (weatherproof setup)

Connects your Starlink Dishy to your caravan or RV with ease. It can be used in an external set up.

Includes: 1x DishyDock Waterproof Port

1 x with or without 1 x 3,5,10 or 15m AWG23 Shielded Ethernet Cable

RV WIFI DishyDock Router

Connects to Starlink to provide excellent WIFI range.

Includes: 1 x DishyDock Router (brackets)

1 x 0.3m AWG23 Shielded Ethernet Cable

1 x 12V power supply

4 x WiFi antennas

RV WIFI5G Router

Upgrade to RV WIFI5G for the perfect integration.

5G access during travelling when Starlink is not operational.


Includes: 1 x RV WIFI5G router (brackets)

1 x 0.3m AWG23 Shielded Ethernet Cable

4 x WiFi and 4 x 3G/4G/5G Antennas

1 x 4x4 MIMO External Antenna



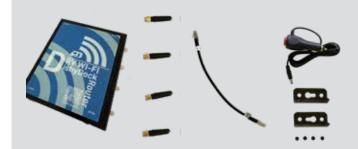



Installing your RV WI-FI DishyDock Power: ENCLOSED SET UP

Position your unit next to the internal DishyDock

Port, DishyDock Router/RVWIFI5G Router and a
double 12V (AWG14) power socket.

Insert 1 x 0.3m Ethernet cable into the port labelled - 'DishyDock Router' (Silver)

The other end of the Ethernet Cable into the Dishy-Dock Router/5G (Blue) into the BLUE WAN port. Important: DO NOT INSERT THE YELLOW LAN PORTS

Insert 1 x 0.3m Ethernet into the port labelled - 'Dishy' (Silver)

The other end of the Ethernet cable into the 'Dishy-Dock' port (White)

Insert the power cord into one of the two 12V power sockets

Insert the DishyDock Router/RV WIFI 5G Router power cord into the second 12 V power socket.

NOTE Note: Do not hard wire the DishyDock or 5G routers unless discussed with RV WIFI



Ethernet Cable Set Up



PORT (white)

3

5





Connecting your DishyDock System Together

Install your Starlink App as instructed in the Starlink User Guide. Position your Dishy as instructed in the Starlink User guide. Insert the Dishy Cable into the Starlink adapter. 1 Insert the adapters ethernet cable into the DishyDock Port on the outside of your RV. Position the four parts of the DishyDock System together in the displayed configeration. It must be in an accessible location inside your Caravan/RV. Your internal DishyDock Port will either be 2 connected via cables or directly from the exerternal DishyDock Port. NB: must be at least 1.5m from solar invertor Insert each end of the 0.3m ethernet cable into its corresponding ports. 3 - 'DishyDock Port' labelled end will go into the white DishyDock Port. - 'DishyDock Power' labelled end will go into the port labelled 'Dishy' 4 Insert the 12V power plug into one of the 12V wall sockets. Insert each end of the second 0.3m ethernet cable into its corresponding ports. - 'DishyDock Power' labelled end will go into the DishyDock Power RJ45 port labelled 'DishyDock Router' 5 - Blue 'WAN' labelled end into the Blue WAN port of Router. NB: DO NOT USE YELLOW LAN PORTS Insert the 12V power adapter into the router. 6 Insert the 12V power adapter into the second power socket and turn system on. 7

Installing your RV Wi-Fi DishyDock Power: WEATHERPROOF SETUP

1	Decide on a location for the DishyDock System inside and outside your RV.
2	Drill a hole according to dimensions provided in Installation Kit, taking note of Wiring Diagram provided by RV manufacturer.
3	Mount the external RJ45 IP67 DishyDock Port, using fixings to suit the material of your RV walls.
4	Mount your DishyDock Power next to the Port, Router and a double 12V (AWG14) power socket.
5	Insert 1 x 0.3m ethernet cable into the port labelled - DishyDock Router (Silver). Insert the other end of the ethernet Cable into the Router/5G (Blue) into the BLUE WAN port. Important: DO NOT PLUG INTO THE YELLOW LAN PORTS.
6	Insert 1 x 0.3m ethernet into the port labelled - Dishy" (Silver) Insert the other end of the ethernet cable into the DishyDock port (White).
7	Insert the power cord into one of the two 12 V power sockets.
8	Insert the DishyDock Router/RV WIFI 5G Router power cord into the second 12V power socket. NB: Do not hard wire the DishyDock or 5G routers unless discussed with RV WIFI
Note	Note: Do not hard wire the DishyDock or 5G routers unless discussed with RV WIFI
thernet Cable set up	

1

See previous page.



Connecting your DishyDock System together

1

2

3

4

5

6


7

Install your Starlink App as instructed in the Starlink User Guide. Position your Dishy as instructed in the Starlink User guide. Insert the Dishy Cable into the Starlink adapter. Insert the adapters ethernet cable into the DishyDock Port on the outside of your RV. Position the four parts of the DishyDock System together in the displayed configeration. It must be in an accessible location inside your Caravan/RV. Your internal DishyDock Port will either be connected via cables or directly from the exerternal DishyDock Port. NB: must be at least 1.5m from solar invertor Insert each end of the 0.3m ethernet cable into its corresponding ports. - 'DishyDock Port' labelled end will go into the white DishyDock Port. - 'DishyDock Power' labelled end will go into the port labelled 'Dishy' Insert the 12V power plug into one of the 12V wall sockets. Insert each end of the second 0.3m ethernet cable into its corresponding ports. - 'DishyDock Power' labelled end will go into the DishyDock Power RJ45 port labelled 'DishyDock Router' - Blue 'WAN' labelled end into the Blue WAN port of Router. NB: DO NOT USE YELLOW LAN PORTS Insert the 12V power adapter into the router. Insert the 12V power adapter into the second power socket and turn system on.

Enclosed Set up:


Enclosed DishyDock Ports and Ethernet Cable.

Choose between 3, 5, 10 or 15m length Ethernet Cable

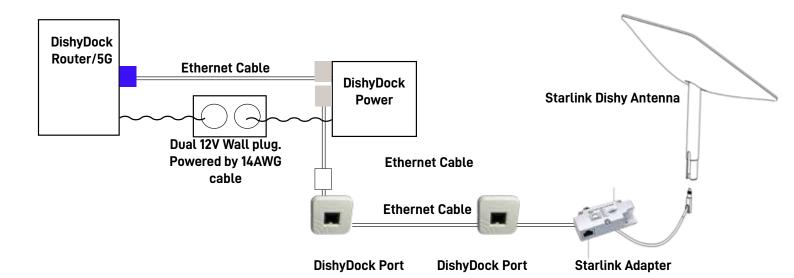

Weatherproof Set up (no cable):

Weatherproof IP67 DishyDock Ports: No cable

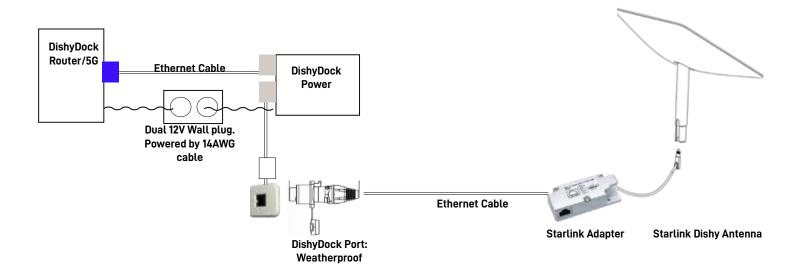

Weatherproof Set up:

Weatherproof IP67 DishyDock Ports:

